

## Quick Start Guide

# Before you begin, you will need:

- VersaTile™
- A smartphone (recommended), tablet, or PC with WiFi
- Your location's WiFi network name & password. (2.4GHz network required)



Warranty: Two (2) years of limited warranty. (Batteries and physical damages are exempt from the warranty.)

## STEP 1

### Scan QR code below

Get started by scanning code or visiting [www.versahub.com/setup/versatile/](http://www.versahub.com/setup/versatile/) to begin device setup.

Visit [versahub.com](http://versahub.com) for setup video instructions, troubleshooting, and guides.



## STEP 2

### Follow device setup on VersaHub

#### IMPORTANT

During setup, place your VersaTile™ in its intended location. While connecting device to your WiFi it will indicate signal strength. Ensure a strong WiFi connection is available with 4 bars (recommended) or greater.

SSID	Signal	Enc.
TP-Link_27a		WPA/WPA2/PSK



## STEP 3

### Setup Notifications & Alerts

After completing setup, configure alert thresholds in device settings panel.

#### INSTALLATION TIPS

Install VersaTile™ as high as possible to avoid being surrounded by containers of food/water/etc., which can impede WiFi connection.

VersaTile™ is provided with a sticky mounting tab. Prior to installing, ensure surface is clean and free of any moisture.

VersaTile™ has excellent battery life, but can be plugged into a USB-C charger for perpetual operation.

Questions?

[www.versahub.com/setup/versatile/](http://www.versahub.com/setup/versatile/)